


# TRIMMER CARE INSTRUCTIONS

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS TRIMMER.

## OILING BLADES

For best results, put one or two drops of Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil.

When oiling your trimmer, turn the trimmer “ON - I,” hold the unit with the blades facing DOWN and squeeze one or two drops of oil onto the blades. Wipe off excess oil with soft cloth.

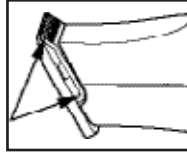

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

## BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material.

Should blades become damaged or dull, you may purchase a new blade assembly from Wahl. (Have your model numbers off the unit ready.)

## CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage. When the trimmer is not in use, the trimmer guide/blade guard attachment should be in place to protect the blades.

## SAVE THESE INSTRUCTIONS

### RECHARGING

1. This trimmer is conveniently designed for household use. It should be allowed to charge overnight before first use.
2. Remove the trimmer, recharging transformer and accessories from the packing material.
3. Connect the transformer to the trimmer. BE SURE TRIMMER IS IN THE “OFF - 0” POSITION WHEN CHARGING.
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage.
5. When trimmer is not in use, it may be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to continuously charge the battery without overcharging.
6. For Battery operated Trimmers: Ni-Cad and Ni-MH battery life may be extended with the following procedure: Once every month, let the trimmer run until the motor stops. Move the switch to the “OFF - 0” position and recharge fully overnight.  
For Lithium Ion Trimmer: The battery will take approximately 60 minutes to charge. The Lithium Ion Trimmer also has quick charge capability.
7. If you have a rechargeable cord/cordless trimmer, it can be used with the cord so you can trim even if the charge is low. The charging indicator light will glow when your trimmer is in the “OFF” position and connected to its charger. The trimmer cannot be overcharged, so you may charge it as often as desired. We

recommend that the battery be “worked” or discharged by trimming without the cord and by not recharging after every use. In certain areas that experience low line voltages, the red charging indicator light on your trimmer may become dim as the battery nears full charge. This dimming does not affect the performance of your trimmer but is simply a result of variances in power line voltages.

## IMPORTANT SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

### DANGER

To reduce the risk of death or injury by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. Always unplug this appliance before cleaning.
6. (Rechargeable unit only.) Unplug the charger before using trimmer.

### WARNING

To reduce the risk of burns, electrical shock or injury to persons:

1. This power unit is intended to be correctly orientated in a vertical or floor mount position.
2. For Lithium Ion Batteries only: Do Not Crush, Disassemble, Heat Above 100°C (212°F), or Incinerate the appliance, due to Risk of Fire, Explosion, or Burns.
3. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
4. Use this appliance only for its intended use as described in its manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
6. Keep the cord away from heated surfaces.
7. Insert only recharging transformer plug into charger receptacle.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use this appliance with a damaged or broken blade or trimming attachment, as facial injury may occur.
10. Always attach plug to appliance first, then to outlet.  
To disconnect, turn unit “OFF - 0,” then remove plug from outlet.

## SERVICE AND REPAIR

If you have problems with your trimmer, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation  
Attn: Repair Department  
3001 Locust Street  
Sterling, IL 61081

Telephone (815) 625-6525

For products purchased outside the United States, contact your distributor.